

Digital Temperature Controllers E5GN

Compact and Intelligent Temperature Controllers

1/32 DIN with Communications Function

- Various temperature inputs: Thermocouple, platinum resistance thermometer, infrared temperature sensor, and analog inputs.
- Auto-tuning and self-tuning available. Auto-tuning is possible even while self-tuning is being executed.
- Heating or heating/cooling control is available.
- Water-resistant construction (NEMA4X: equivalent to IP66).
- Conforms to UL, CSA, and IEC safety standards as well as CE marking.



48(W) x 24(H) x 100(D) mm



Model Number Structure

Model Number Legend

E5GN- -FLK

1 2 3 4 5

1. Output type

- R: Relay
- Q: Voltage (for driving SSR)

2. Number of alarms

- Blank: No alarm
- 1: One alarm

3. Communications

- Blank: No communications function
- 03: RS-485

4. Input type

- TC: Thermocouple
- P: Platinum resistance thermometer

5. CompoWay/F serial communications

- FLK: CompoWay/F serial communications

Ordering Information

Standard Models

| Size | Power supply voltage | No. of alarm points | Control output | Thermocouple model | Platinum resistance thermometer model |
|---------------------------------------|----------------------|---------------------------|---------------------------|--------------------|---------------------------------------|
| 1/32 DIN 48(W) x 24(H) x 100(D) mm | 100 to 240 VAC | --- | Relay | E5GN-RTC | E5GN-RP |
| | | | Voltage (for driving SSR) | E5GN-QTC | E5GN-QP |
| | | 1 (see note 1) | Relay | E5GN-R1TC | E5GN-R1P |
| | | | Voltage (for driving SSR) | E5GN-Q1TC | E5GN-Q1P |
| | 24 VAC/VDC | --- | Relay | E5GN-RTC | E5GN-RP |
| | | | Voltage (for driving SSR) | E5GN-QTC | E5GN-QP |
| 1 (see note 1) | | Relay | E5GN-R1TC | E5GN-R1P | |
| | | Voltage (for driving SSR) | E5GN-Q1TC | E5GN-Q1P | |

Note 1. If the heating/cooling function is used, ALM1 will be used for control output and so alarm output will not be available.

2. Control output 2 for heating/cooling control is relay output.

3. Specify the power supply specifications when ordering.

■ Communication Models

| Size | Power supply voltage | Communication function | Control output | Thermocouple model | Platinum resistance thermometer model |
|---------------------------------------|----------------------|------------------------|---------------------------|--------------------|---------------------------------------|
| 1/32 DIN 48(W) x 24(H) x 100(D) mm | 100 to 240 VAC | RS-485 | Relay | E5GN-R03TC-FLK | E5GN-R03P-FLK |
| | | | Voltage (for driving SSR) | E5GN-Q03TC-FLK | E5GN-Q03P-FLK |
| | 24 VAC/VDC | | Relay | E5GN-R03TC-FLK | E5GN-R03P-FLK |
| | | | Voltage (for driving SSR) | E5GN-Q03TC-FLK | E5GN-Q03P-FLK |

Note: Specify the power supply specifications when ordering.



Specifications

■ Ratings

| | | |
|--------------------------------|---|---|
| Supply voltage | 100 to 240 VAC, 50/60 Hz | 24 VAC, 50/60 Hz/24 VDC |
| Operating voltage range | 85% to 110% of rated supply voltage | |
| Power consumption | 7 VA | 4 VA/2.5 W |
| Sensor input | Thermocouple: K, J, T, E, L, U, N, R, S, B Platinum resistance thermometer: Pt100, JPt100 Infrared temperature sensor: 10 to 70°C, 60 to 120°C, 115 to 165°C, 160 to 260°C Voltage input: 0 to 50 mV | |
| Control output | Relay output | SPST-NO, 250 VAC, 2 A (resistive load), electrical life: 100,000 operations |
| | Voltage output | 12 VDC (PNP), max. load current: 21 mA, with short-circuit protection circuit |
| Alarm output | SPST-NO, 250 VAC, 1 A (resistive load), electrical life: 100,000 operations | |
| Control method | 2-PID or ON/OFF control | |
| Setting method | Digital setting using front panel keys | |
| Indication method | 7-segment digital display and single-lighting indicator Character height: PV: 7.0 mm; SV: 3.5 mm | |
| Other functions | According to controller model | |
| Ambient temperature | -10 to 55°C (with no condensation or icing) | |
| Ambient humidity | 25% to 85% | |
| Storage temperature | -25 to 65°C (with no condensation or icing) | |

Input Ranges

Platinum Resistance Thermometer Input/Thermocouple Input

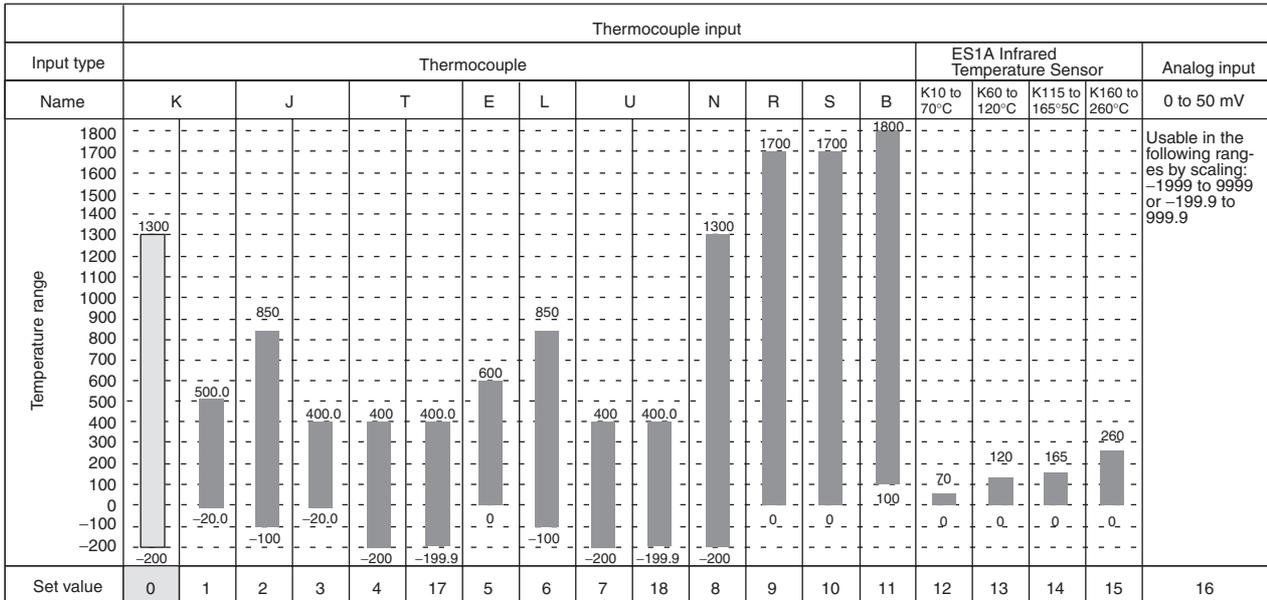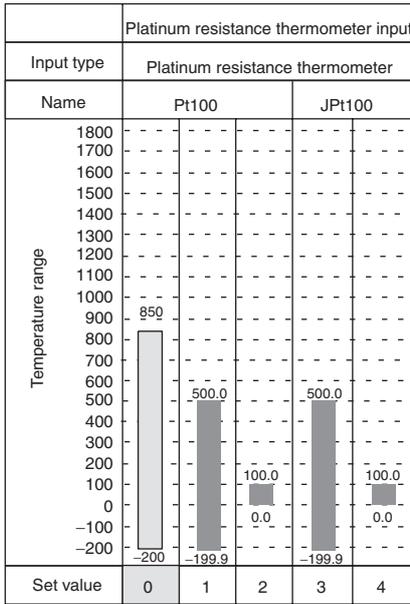

Applicable standards by input type are as follows:


- K, J, T, E, N, R, S, B: JIS C1602-1995
- L: Fe-CuNi, DIN 43710-1985
- U: Cu-CuNi, DIN 43710-1985
- JPt100: JIS C1604-1989, JIS C1606-1989
- Pt100: JIS C1604-1997, IEC751

Shaded ranges indicate default settings.

ES1A models with a temperature range of 160°C to 260°C have been discontinued.


Wiring Terminals

- The voltage output (control output) is not electrically insulated from the internal circuits. When using a grounding thermocouple, do not connect the control output terminals to the ground. If the control output terminals are connected to the ground, errors will occur in the measured temperature values as a result of leakage current.
- Standard insulation is applied to the power supply I/O sections. If reinforced insulation is required, connect the input and output terminals to a device without any exposed current-carrying parts or to a device with standard insulation suitable for the maximum operating voltage of the power supply I/O section.

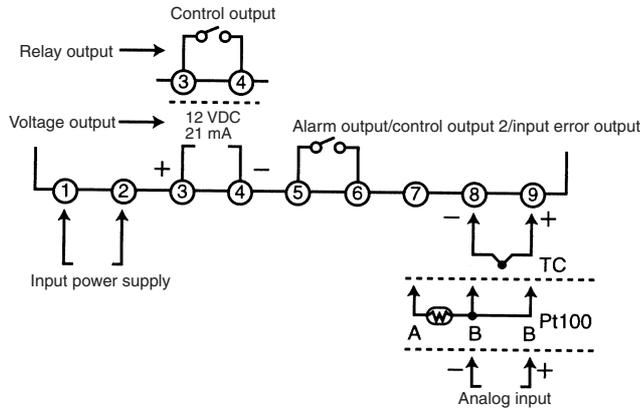





Two input power supplies are available; 100 to 240 VAC or 24 VAC/VDC (no polarity). Recommended power supply for 24VDC; eg. OMRON S8VS.

Nomenclature

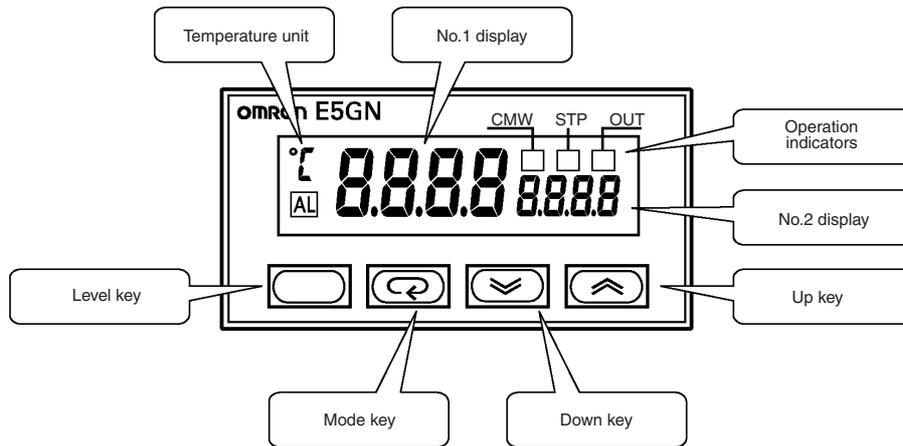


Dimensions

Note: All units are in millimeters unless otherwise indicated.

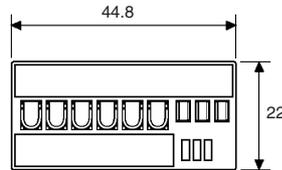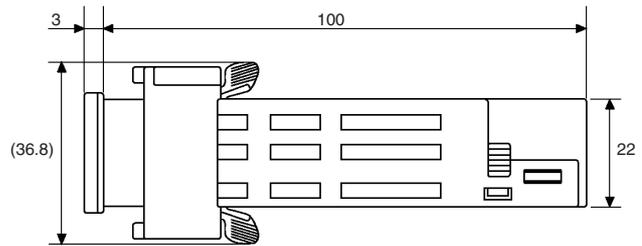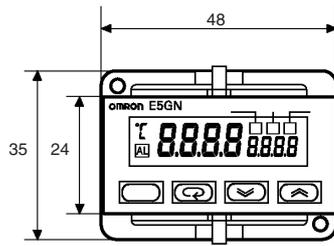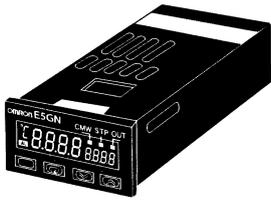


*When carrying out maintenance on the E5GN, only the terminal plate can be drawn out with the terminal leads still attached.

Panel Cutout
Mounted Separately

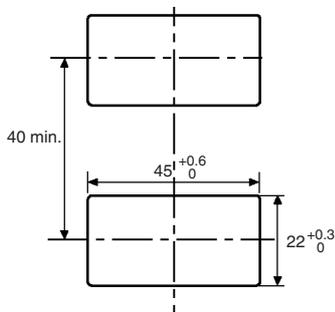

Group Mounted

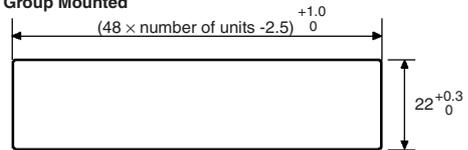

Mounting separately does not allow waterproofing.

- Insert the Controller through the hole in the panel from the front and push the adapter on from the rear. Push the adapter up to the back of the panel ensuring that the controller is pushed all the way in, removing any gap between the Controller, panel, and adapter. Finally, use the two screws on the adapter to secure the unit in place.
- To mount the E5GN so that it is waterproof, insert the waterproof packing onto the E5GN.
- When two or more E5GN Controllers are mounted, make sure that the surrounding temperature does not exceed the allowable operating temperature given in the specifications.

ALL DIMENSIONS SHOWN ARE IN MILLIMETERS.

To convert millimeters into inches, multiply by 0.03937. To convert grams into ounces, multiply by 0.03527.