


# Common to all H7□P

## Input Connections

**Note:** The undermentioned is common for all H7GP/H7HP models.

### No-voltage Input (NPN Input Mode)

#### Reset, Count 1, Count 2, Start, and Gate Inputs

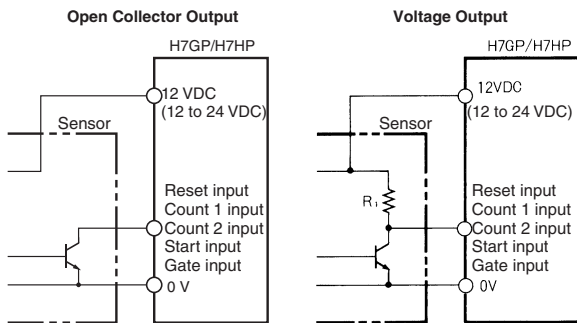


#### Reset, Count 1, Count 2, Start, and Gate Inputs Specification

Short-circuit (ON) impedance: 1 kΩ max.  
 Short-circuit (ON) residual voltage: 2 VDC max.  
 Current flow for 0-Ω short-circuit: Approx. 2 mA  
 Open (OFF) impedance: 100 kΩ min.

**Note:** Two-wired sensors cannot be used.

### Key Protection Input

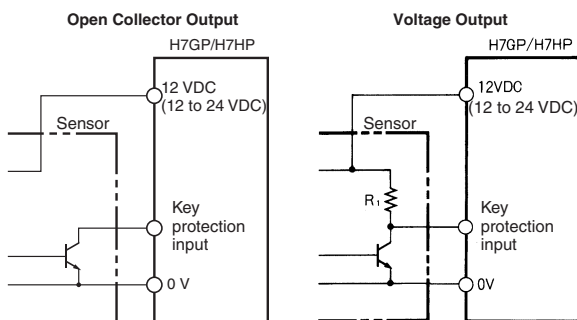


#### Key Protection Inputs Specification

Short-circuit (ON) impedance: 1 kΩ max.  
 Short-circuit (ON) residual voltage: 0.5 VDC max.  
 Current flow for 0-Ω short-circuit: Approx. 0.5 mA  
 Open (OFF) impedance: 100 kΩ min.

**Note:** Two-wired sensors cannot be used.

### Voltage Input (PNP Input Mode)

#### Reset, Count 1, Count 2, Start, and Gate Inputs

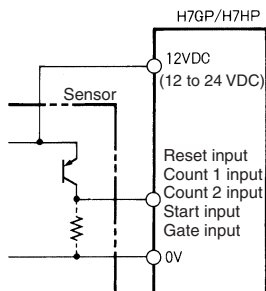

#### Reset, Count 1, Count 2, Start, and Gate Inputs Specification

Short-circuit (ON) impedance: 1 kΩ max.  
 ON voltage: 9 to 24 VDC  
 OFF voltage: 5 VDC max.  
 Open (OFF) impedance: 100 kΩ min.

**Note:** Two-wired sensors cannot be used.


# Precautions (Common)

**Note:** The undermentioned is common for all H7GP/H7HP models.


## Power Supplies

When turning the power ON and OFF, input signal reception is possible, unstable, or impossible as shown in the diagram below.

Apply the power supply voltage through a relay or switch in such a way that the voltage reaches a fixed value immediately.

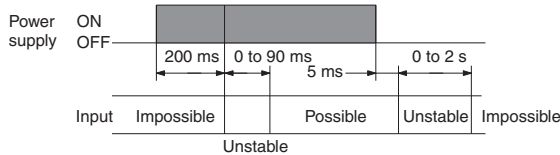

Although the H7GP/H7HP power supply (primary side) is isolated from control circuits (secondary side) by a transformer, the primary and secondary sides of the transformer are linked by a capacitor, making it possible for high-frequency components to leak to the secondary side. Take adequate precautions against electrical shock. Do not connect input circuits to exposed parts (such as the machine body) and be sure that the power supply is turned off before wiring.

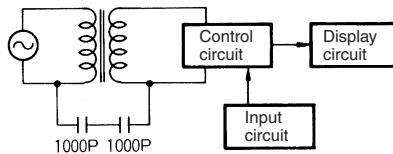

## Self-diagnostic Function


The following displays will appear if an error occurs.

Display	Error	Correction
----	-99999 max. (H7HP, 6-digit model) -99999999 max. (H7HP, 8-digit model)	Press RST Key or reset input
E1	CPU	Press RST Key or turn power OFF and then ON
E2	Memory	

## Flush Mounting

The panel surface is water-resistive (conforming to NEMA 4 and IP66). In order to prevent the internal circuit from water penetration through the space between the counter and operating panel, attach a rubber packing between the counter and operating panel and secure the rubber packing with the Y92F-3 flush-mounting adaptor.

Be sure the rubber packing is installed in the correct direction. The wider portion must be facing the panel when installed, as shown in the following illustration. Using a flat-head screwdriver, press in the Mounting Adapter until it cannot be pressed in any further in order to ensure water-resistive performance.

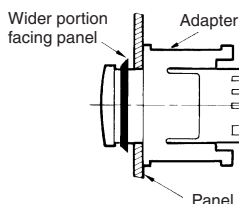

## Other

Water resistance may deteriorate depending on the environment. Periodically check water resistance.


Oil resistance is not applicable to all types of oil. Be sure to test any specific oils before actual application.

## Labels


Unit labels are included with the H7GP/H7HP and DIP switch labels are included with the H7HP. Attach these labels as shown in the following illustrations.

### Unit Labels

#### H7GP




#### H7HP

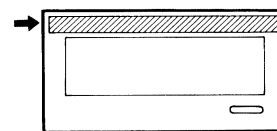

### DIP Switch Labels

#### H7HP




## Accessories


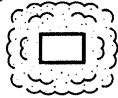
The accessories listed in the following table are included with the H7GP/H7HP. Be sure you understand the use of these accessories and use them correctly.

Name	H7GP	H7HP
Rubber packing	Y92S-32	Y92S-33
Flush mounting adaptor	Y92F-32	Y92F-33





## Degree of Protection

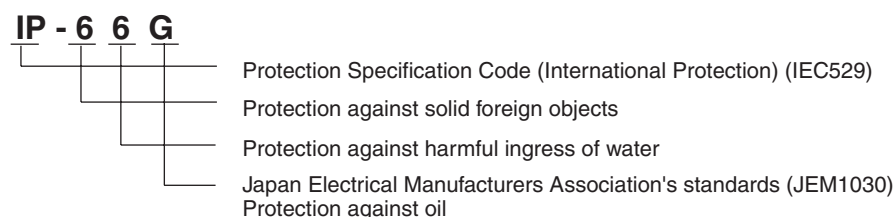

### Protection Against Solid Foreign Objects

Grade	Protection	Criteria
5	Dust protected 	Limited ingress of dust permitted (no harmful deposit).
6	Dust-tight 	Totally protected against ingress of dust.

### Protection Against Harmful Ingress of Water

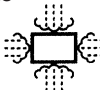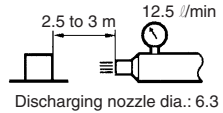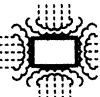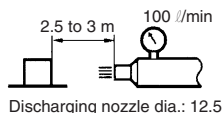Grade	Protection	Criteria	Examination method
5	Housing jets from all directions 	Protected against low-pressure jets of water from all directions; limited ingress permitted.	Spray water from all directions for one minute per m2 of external surface area and for a total time of no less than 3 minutes using the test device shown below.  Discharging nozzle dia.: 6.3
6	Strong hosing jets from all directions 	Protected against strong jets of water, e.g. for use on ship-decks; limited ingress permitted.	Spray water from all directions for one minute per m2 of external surface area and for a total time of no less than 3 minutes using the test device shown below.  Discharging nozzle dia.: 12.5

### JEM Standards

#### Protection Against Oil

Grade	Protection	Criteria	Criteria
F	Oilproof	Protected against improper operation due to oil drops or spray from any direction.	No penetration of oil to the extent of interfering with proper operation after dropping the specified cutting oil on a test device for 48 hours at a rate of 0.5 ℓ per hour.
G	Oil resistant	Protected against penetration of oil drops or spray from any direction.	No penetration of oil after dropping the specified cutting oil on a test device for 48 hours at a rate of 0.5 ℓ per hour.

ALL DIMENSIONS SHOWN ARE IN MILLIMETERS.

To convert millimeters into inches, multiply by 0.03937. To convert grams into ounces, multiply by 0.03527.